



INSTALL WATTLE FENCE USING 1 STAKE  
PLACED AT EVERY SLAT.(TYP.)

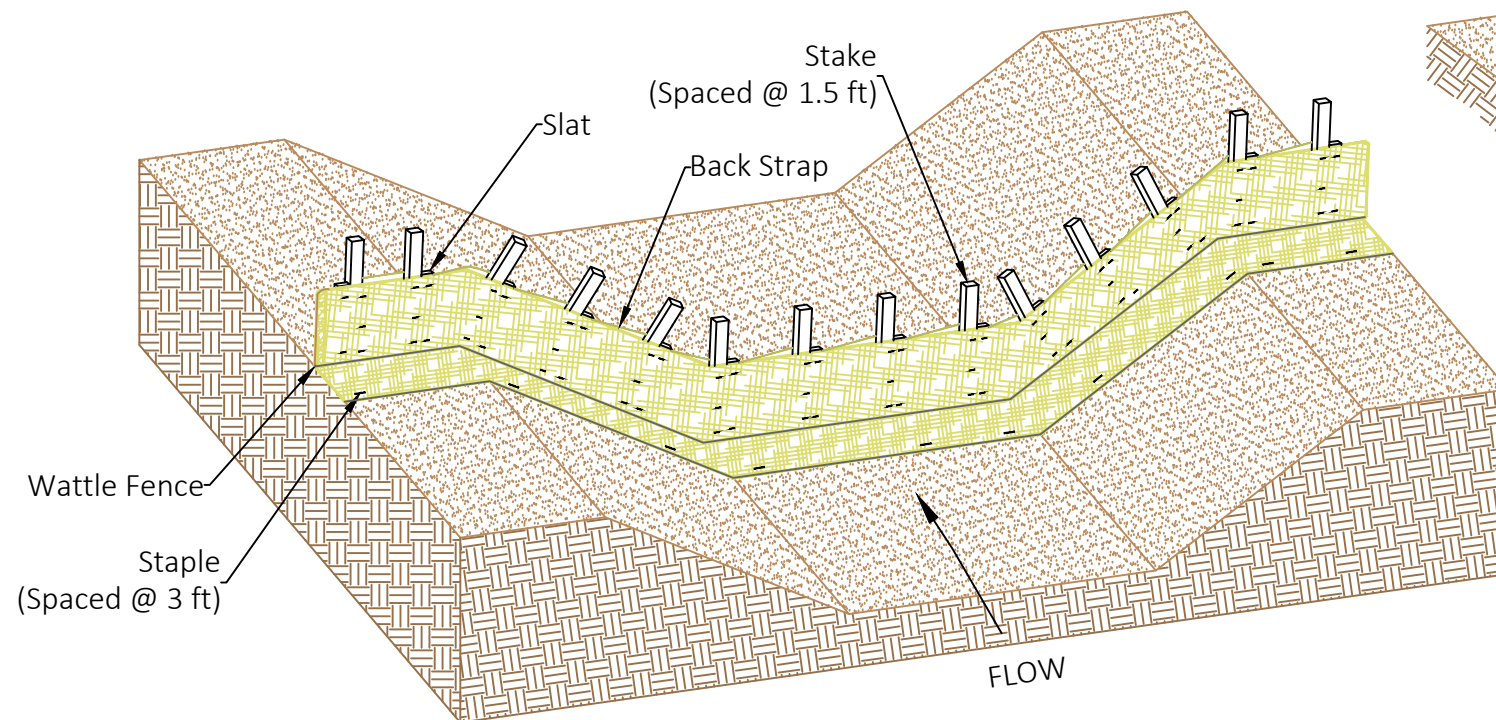

TYPICAL CHANNEL INSTALLATION  
N.T.S.

INSTALL WATTLE FENCE USING 1 STAKE  
PLACED AT EVERY 3RD SLAT.(TYP.)

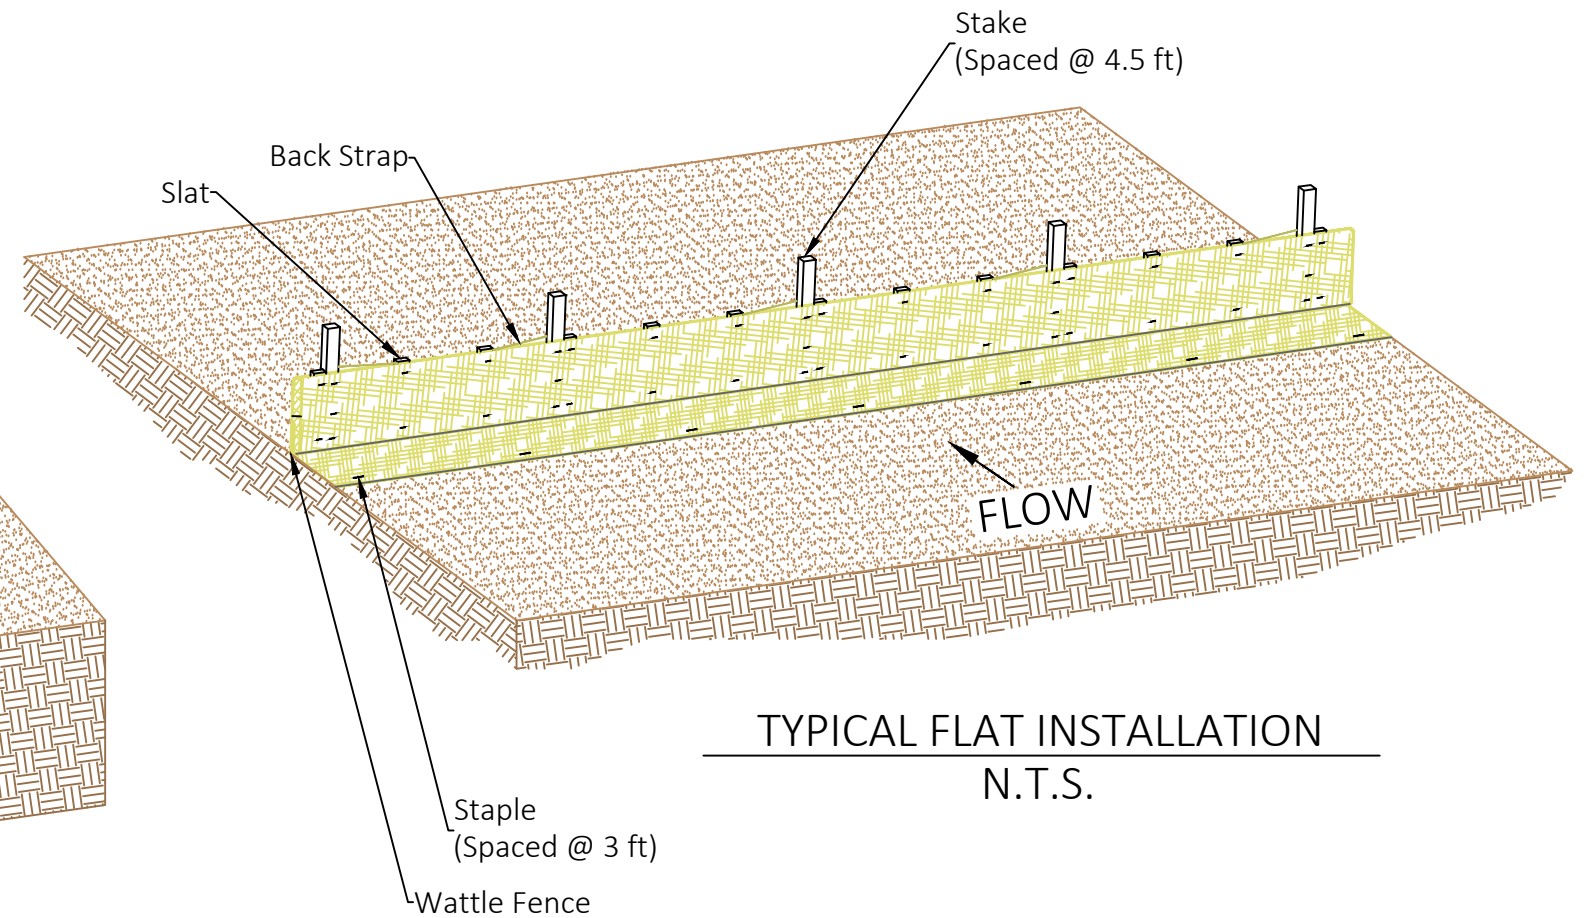


TYPICAL FLAT INSTALLATION  
N.T.S.



Project: Standard Wattle Fence Channel or Flat Ground Application




Shown: Isometric View of Slope, Fastener Placement, Some Fasteners and Vegetation Omitted for Clarity,  
Trenching and Overlap, NTS

Date: 4/19/2022  
WG: 886-540-9810  
www.westerngreen.com  
www.westernexcelsior.com  
www.nagreen.com

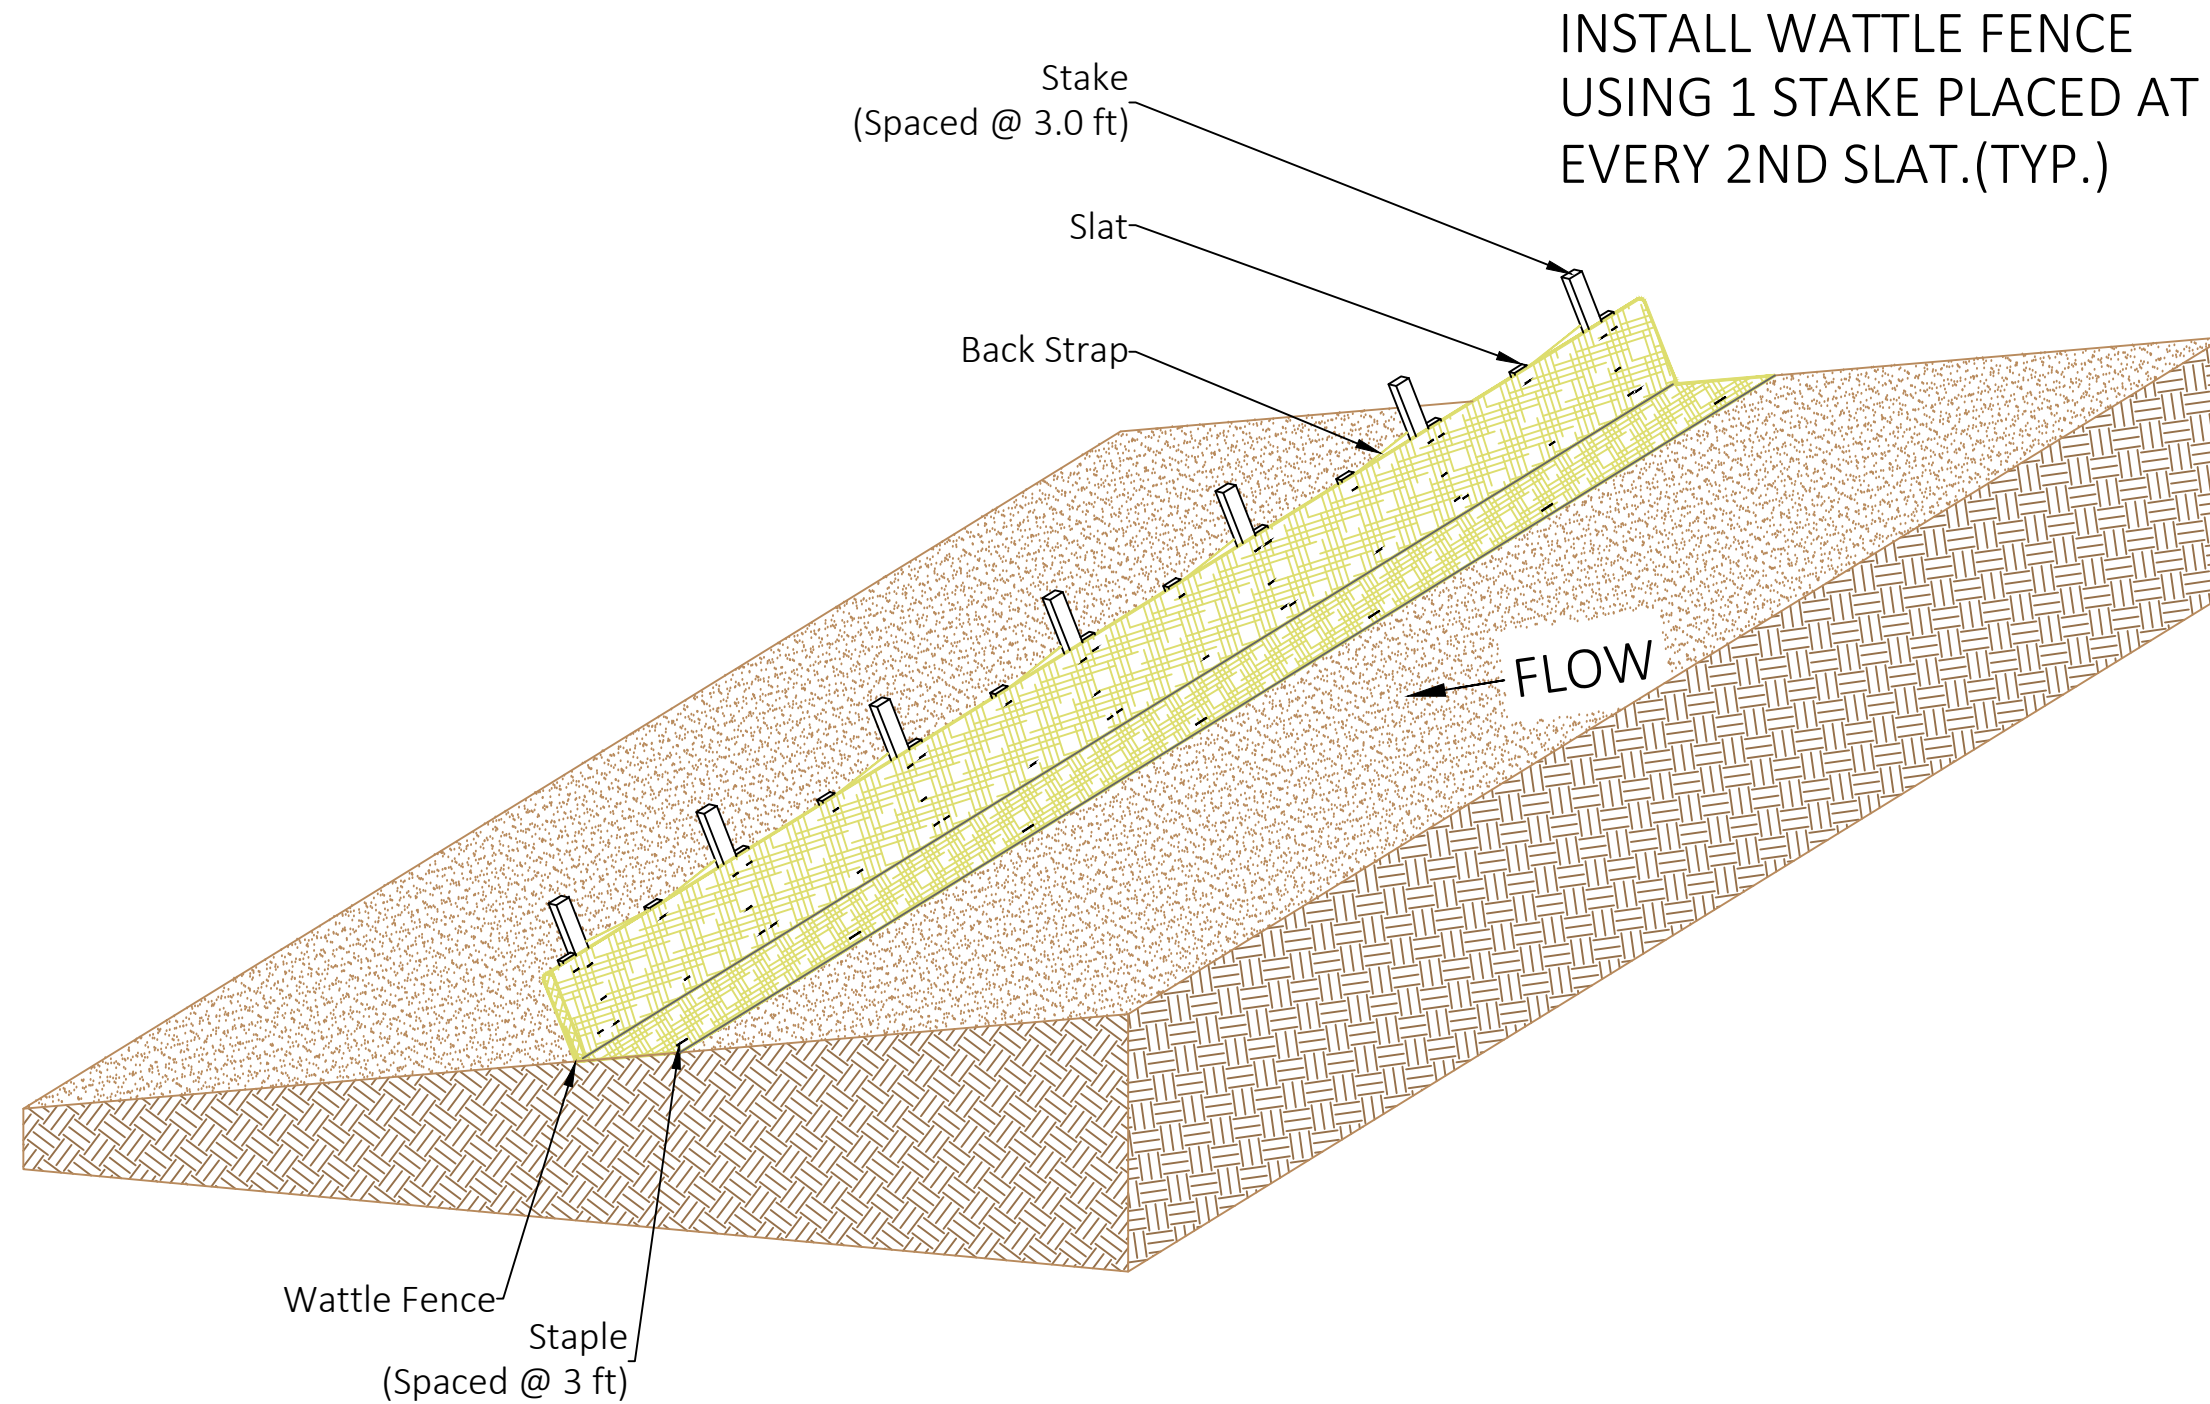

TYPICAL SLOPE INSTALLATION  
N.T.S.



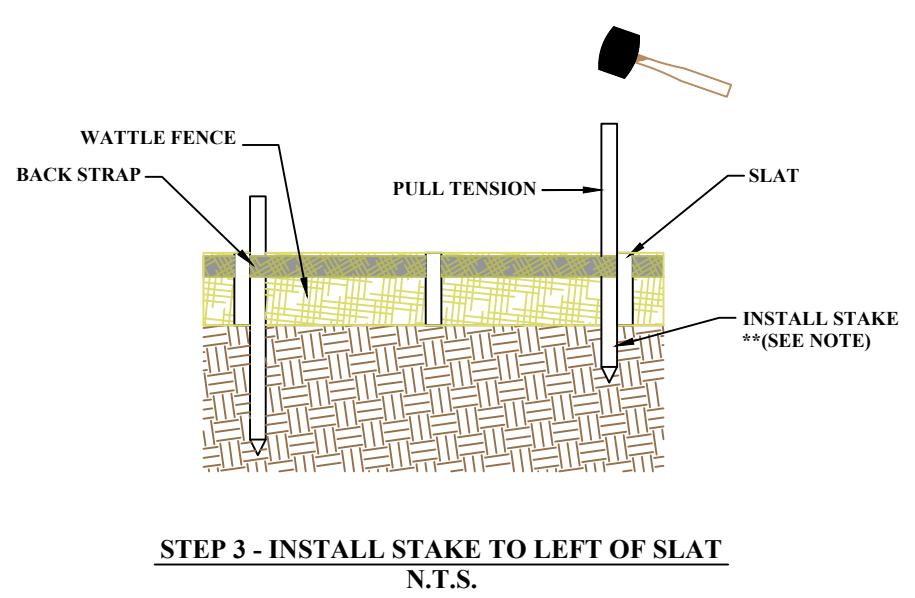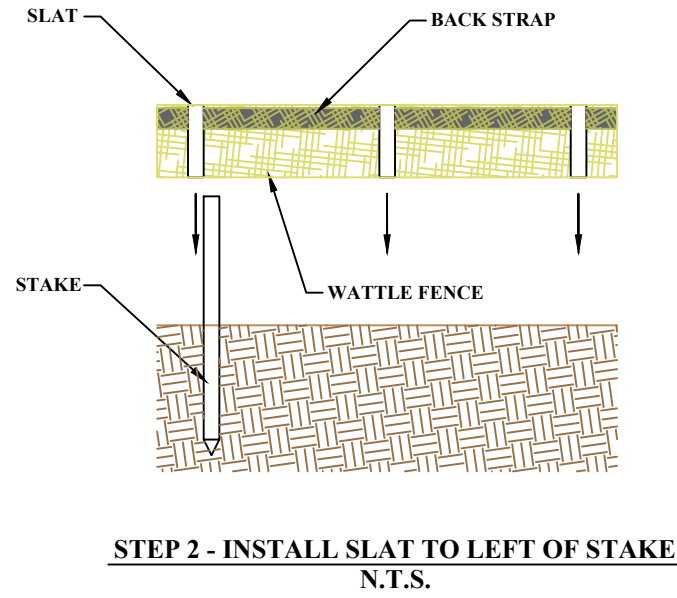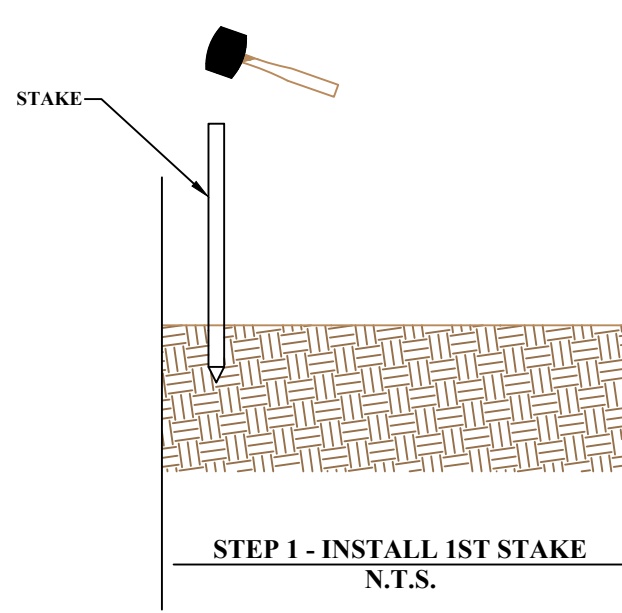

**\*NOTE:**  
INSTALL STAKE BETWEEN THE FENCE AND THE BACK STRAP (WITH THE SLAT TO THE RIGHT). CREATING TENSION AND PULLING THE FENCE TIGHT.

